



## Coil Fitting Instructions

Your new Sparkrite coil is supplied suitable to be fitted to both Non-Ballast and Ballast ignitions, points and most aftermarket electronic ignitions

When used to replace a standard 12 Volt ignition 3 Ohm coil it should be wired as diagram 1

When used to replace a Ballast coil with an external Ballast resistor use diagram 2

When used to replace a Ballast coil on system that has a built in ballast wire. Resistor is not used, use diagram 3

Diagram 1



Diagram 2

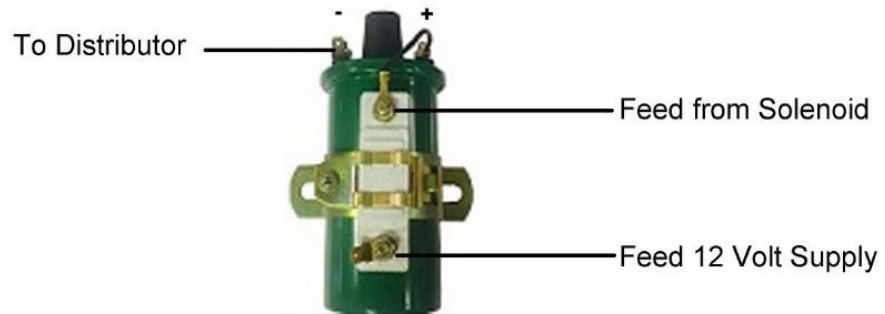


Diagram 3

